 


Type K OPERATING INSTRUCTION

 
★Points for attention:

- When swimming or diving, the button operation can not be made under water. If there is water fog or drip in the surface, the watch should be immediately taken to the appointed maintenance office for maintenance in order to prevent the water corrosion of internal electronic components.
- Chemicals, especially liquid soap, are prohibited to clean the surface for preventing the corrosion of rubber water-proof circle in the watch and surface electroplated layer. Only the soft cloth and clean water are allowed.
- A great deal of electric power will be consumed if using luminescence liquid crystal for a long time.
- Avoid strong shake (except the shake-proof watch), but electronic watch can be shaken commonly. But it is exception that the watch is suffered gravity impact, asperity usage or falls in the hard field.
- The watch can not be used under hot or cold weather.
- The watch should be kept clean for avoiding the oxidation of surface electroplated layer.
- Genuine leather watch band products should be protected against water.
- The watch can not be worn under the situations like strong electric field, electrostatic high frequency, etc. The EL light can not be pressed more than 20 times for extending the service life.
- The watch will not be easily shown for the luminescence in the sun. The monthly error is ± 40 sec. At normal temperature $5^{\circ}\text{C} - 35^{\circ}\text{C}$ (In conformity with international standard)

DISPLAY MODE EXCHANGE

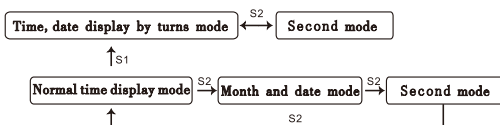


TIME/DATE SET MODE

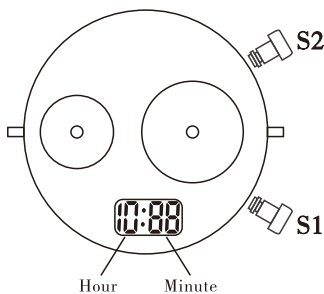

→ At normal time display mode, press S1 key come in to the month and date display by turns model.

 → Press S1 key again to select set item.




→ Press S2 key to adjust, press S2 key to adjust quickly

Note:

1. While set hour, display "A" means ante meridiem, display "P" means post Meridian.
2. After set complete, if display two points in-between, it means come to timing not yet, this moment need press S2 key to confirm.

 STANDARD CAPTION AND BUTTON FUNCTION

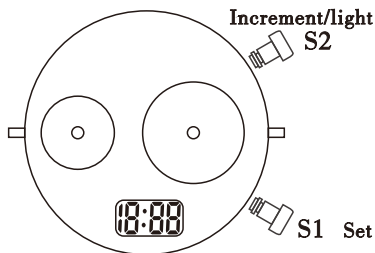

FUNCTION DECLARATION

→ Normal time display: hour、minute

→ At any display mode, press S2 key to make EL light shining for 3 second, press long time, the light shining long time.

Electric Parameter

Working voltage	1.5V
Quiescent current	$\leq 3.0\mu\text{A}$
EL lamination current	$\leq 6\text{mA}$

 
K類

使用說明書

★注意事項

- ◇凡游泳、潜水时不能在水面下按钮操作。
- ◇如发现表面内有水雾或水滴，应立刻到指定维修部拆修，以防止水腐蚀内部电子零件。
- ◇不可使用化学品洗洁表面，仅可使用软布清水清洗，尤其不可用肥皂液，会腐蚀表内之橡皮防水圈导致漏水。
- ◇长期使用冷光液晶将消耗大量电力。。
- ◇避免受到强烈的震动（特别防震系列除外）。电子表可随普通震动，但如遭受重力冲击、粗暴使用或跌落在坚硬场地、则例外。
- ◇避免大酷热或严寒使用。
- ◇经常保持外表清洁、干净，以免外表电镀层氧化。
- ◇真皮表带产品则防止浸水。
- ◇避免在强力电场、静电高周波等状况下配带。为延长使用寿命，每天按EL亮灯不超过20次
- ◇在阳光下冷光将不容易表现。
- ◇在正常温度下5°C-35°C,每月误差< ± 40秒(符合国际标准)。


标准字幕与按键功能

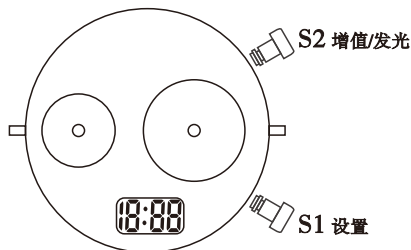


功能说明

- 正常时间显示: 小时、分钟
- 在任意模式下按S2键EL发光延时3秒,长按长亮光。

 
显示模式转换

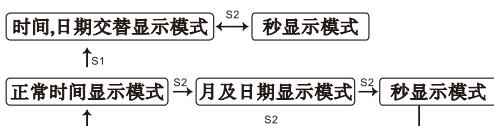

时间/日期设定模式

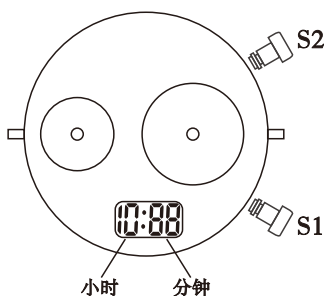 

 - 正常时间显示模式下,按S1键进入月份及日期交替显示模式
- 再按S1键选择设置项目:



- 按S2键调整,按住S2键快速调整

注:

- 1) 在设置小时时,出现"A"代表上午,出现"P"代表下午。
- 2) 设置完成后,若出现中间两点显示不动,即表示还未进入计时,此时需按S2键确认。

電氣參數

工作電壓	1.5V
靜態電流	≤3.0uA
發光電流	≤6mA